

Telephone: 847-439-5667 www.intertek.com

For Immediate Release: DECEMBER 19, 2014

INTERTEK WARNS OF UNAUTHOIZED ETL_{US} AND _cETL_{US} CERTIFICATION MARK ON WI-FI INFRARED HEATERS

Intertek Testing Services (ETL) notifies consumers, retailers and distributors that the following Wi-Fi Infrared Heater bears unauthorized ETL_{US} and _CETL_{US} Certification Mark. It is unknown if this product is in compliance with the applicable safety standard. Five shipments of the Wi-Fi Infrared Heaters bearing the unauthorized ETL Certification Mark are summarized below.

Manufacturer: Wachsmuth & Krogman

Brand: CRANE

Name of Product: WI-FI INFRARED HEATER

Model: EE-8077xxxxx ("x" = A-Z, 0-9, or symbols or blanks)

Date Code: 0814, 0914, 1014 Sold at: Various retailers

Ship Date: October 28, 2014

Quantity: 820

Recipient: Wachsmuth & Krogman, Chicago

Ship Date: September 24, 2014

Quantity: 517

Recipient: Wachsmuth & Krogman, Los Angeles

Ship Date: September 14, 2014

Quantity: 483

Recipient: US Unknown

Ship Date: August 26, 2014

Quantity: 754

Recipient: Wachsmuth & Krogman, Los Angeles

Ship Date: August 21, 2014

Quantity: 410

Recipient: Wachsmuth & Krogman, Los Angeles



Photo of Product:



The following are examples of the product nameplate:

Note: Date code of 0814 and incorrect Standard References

- UL 1287 (should be UL 1278)
- CSA C22.2 No. 46 (Not evaluated for Canada)







The following cautionary marking is missing from product

WARNING: TO REDUCE THE RISK OF FIRE - KEEP COMBUSTIBLE MATERIAL SUCH AS FURNITURE, PAPERS, CLOTHES, AND CURTAINS AT LEAST 3 FEET (0.9 m) FROM THE FRONT OF THE HEATER AND AWAY FROM THE SIDES AND REAR.

This cautionary marking is missing from the cordset

WARNING - TO REDUCE THE RISK OF FIRE:

1) Do not place any objects such as furniture, papers, clothes, and curtains closer than 3 feet (0.9 m) to the front of the heater and keep them away from the sides and rear when the heater is plugged in.

2) Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.

3) Always unplug heater when not in use.

4) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension co or relocatable power tap (outlet/power strip).

5) Check your heater cord and plug connections. A loose fitting outlet can cause the plug to overheat or cause a fire. Be sure plug fits tight in the outlet. Check frequently during use to make sure plug and outlet are not hot. If so, discontinue using heater and have outlet replaced by a qualified electrician.

Note: Heaters draw more current than small appliances, overheating of the outlet may occur even if it has not occurred with the other appliances.

DO NOT REMOVE THIS TAG!

Crane USA. Inc. Control Number:3096581 Item code: EE-8077W(SL) Date code: MMYY